

# STURDY Animal Surrogate Feeder



## SAFETY

- Do not plug the unit in without the element being covered with water.
- Ensure that the element is covered by water at all times. Failure to do so will cause the element to burn out.
- Ensure that the element is protected by insulation sheet.
- Do not allow the rubber feeding tubes to come in contact with the element at any time during operation.
- Do not remove outer element cover while unit is plugged in.

## OPERATION

- Fill water up to point as shown below.
- Ensure that the clear tubing is emersed in the water making sure to keep the tubing away from the element.
- Place the internal container into the unit ensuring that it is located in the brackets provided.
- Place the tube ends into the container making sure that they reach to the bottom of the container.
- Each tube should be fitted with a non return valve.
- Plug the system into a normal socket and within a few minutes the water should reach 40 degrees celsius.
- Fill the container with the amount of milk/feed you require
- There is a built in thermostat in the element which will prevent the water from getting above 40 degrees celsius.



Fill Water to this level



**STURDY PRODUCTS LIMITED**  
Blessington Industrial Estate, Blessington, Co Wicklow  
Tel: +353 (0)45 865044 Fax: +353 (0)45 865721  
E-mail: [sales@sturdyproducts.com](mailto:sales@sturdyproducts.com) Website: [www.sturdyproducts.com](http://www.sturdyproducts.com)