

STURDY Animal Surrogate Feeder



- Do not plug the unit in without the element being covered with water (see water fill line below).
- Ensure that rubber feeding tubes are immersed in the water
- Do not allow these rubber feeding tubes to come in contact with the element at any time during operation.
- Ensure that the rubber feeding tubes are protected from the element by black plastic sheet provided.
- Ensure that the element is covered by water at all times. Failure to do so will cause the element to burn out.
- The heating element has been pre-set at 30 degrees celsius so you should never have the need to tamper with the element.
- Never remove outer element cover while unit is plugged in.



Fill Water to this level



- The Feed/Milk is to be placed in the container provided.
- Allow the water to get up to temperature before allowing animals to feed.
- Ensure that the tubes with the non-return valves are immersed in the milk or feed.
- As the animals suckle the teat, the milk or feed is drawn from the internal container and passes through the heated water where it is heated to the correct temperature.